



Digital Tyre & Tread Depth Gauge Instructions - RTG6

- (F) Jauge de profondeur et de contrôle de la structure du pneu numérique
- (D) Digitaler Reifen- und Profiltiefenmesser
- (I) Calibro di profondità digitale pneumatici e battistrada
- (E) Profundímetro digital para neumáticos y bandas de rodadura
- (P) Medidor digital de pneus e banda de rodagem
- (DK) Digital dæk & rilledybde måler
- (NL) Digitale bandenspannings- en draaddieptemeter
- (S) Digitalt däck & slitbanans mönsterdjup
- (FIN) Digitaalinen renkaiden & kulutuspinnan syvyyssmittari
- (N) Digital måler for dekktrykk & slitebanedybde
- (PL) Cyfrowy ciśnieniomierz do kół i miernik głębokości bieżnika opon
- (CZ) Digitální měřič pro pneumatiky a hloubku vzorku
- (RO) Aparat de măsură a presiunii și profilului anvelopelor, digital
- (H) Számjegyes gumibroncs nyomás- és futófelület-mélység mérő
- (UA) Цифровий шинний манометр і щуп глибини малюнка протектора шини
- (RUS) Цифровой шинный манометр и щуп глубины рисунка протектора шины



 

Introduction

(F) Introduction
(D) Einführung
(I) Presentazione
(E) Introducción

(P) Introdução
(DK) Introduktion
(NL) Inleiding
(S) Introduktion

(HN) Johdanto
(N) Introduksjon
(PL) Wstęp
(CZ) Úvod

(RO) Introducere
(H) Bevezetés
(UA) Вступ
(RUS) Введение

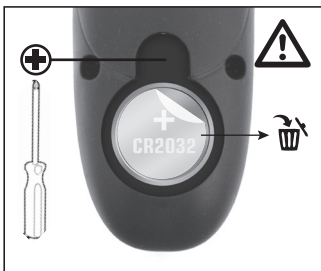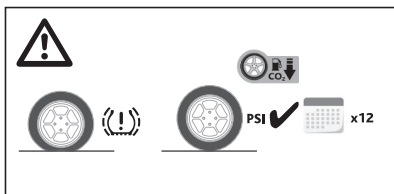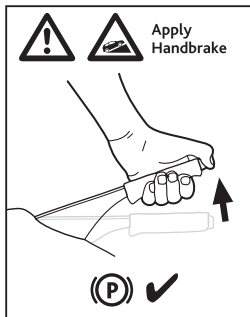

Control layout

(F) Disposition des commandes

(P) Disposição de controlo

(FIN) Ohjainten asettelu

(RO) Dispunere comenzi

(D) Anordnung der Bedienelemente

(DK) Kontrol opsætning

(N) Kontroll-layout

(H) Vezérlő elrendezés

(I) Layout di comando

(NL) Bedieningslayout

(PL) Rozmieszczenie elementów sterujących


(UA) Улаштування щита управління

(E) Disposición de los controles

(S) Kontrollayout

(CZ) Schéma ovládní

(RUS) Компоновка щита управления

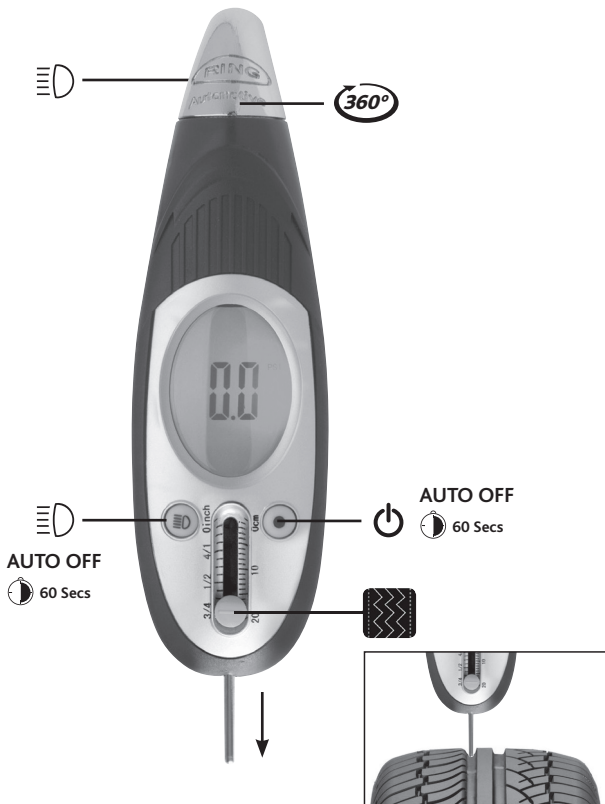

Operation

F Fonctionnement

D Bedienung

I Funzionamento

E Operación

P Operação

OX Drift

NL Bediening

S Drift

FIN Käyttö

N Drift

PL Działanie

 

 

CZ Fungování

RO Funcționare

H Működés

UA Експлуатація


RUS Эксплуатация

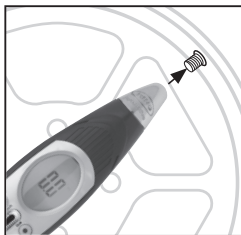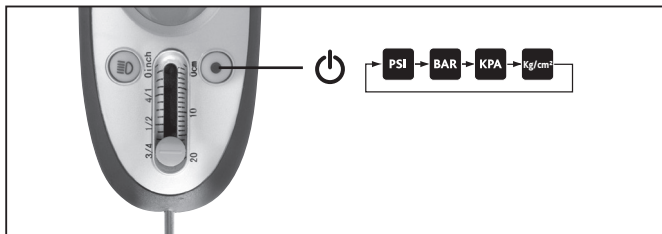

AUTO OFF



 60 Secs



Tyre Tread Depth Guide

- F Jauge de profondeur et de contrôle de la structure du pneu
- D Profiltiefenmesser
- I Calibro di profondità pneumatici battistrada
- E Profundímetro para neumáticos y bandas de rodadura
- P Medidor de profundidade da banda de rodagem do pneu

- DK Dæk rilledybde måler
- NL Draaddieptemeter
- S Däck slitbanans mönsterdjup
- FIN Renkaan kulutuspinnan syvyysmittari
- N Måler for dekkets slittebanedybde

- PL Wymiana baterii
- CZ Měřič hloubky vzorku
- RO Aparat de măsură a presiunii și profilului anvelopelor
- H Gumiabroncs futófelület-mélység mérő
- UA Щуп глибини малюнка протектора шини
- RUS Щуп глубины рисунка протектора шины



The UK legal minimum tread depth for cars and light trailers (inc caravans) up to 3500kgs gross vehicle weight and or 8 seated passenger vehicles including the driver is a minimum of 1.6mm in a continuous band throughout the central three-quarters of the tread width throughout the whole of the circumference


Battery Replacement

- F Batterie de remplacement
- D Batteriewechsel
- I Sostituzione batteria
- E Sustitución de la batería

- P Substituição da bateria
- DK Batteri udskiftning
- NL Batterijvervanging
- S Utbyte av batteri

- FIN Pariston vaihtaminen
- N Batteriveksel
- PL Wymiana baterii
- CZ Výměna baterie

- RO Înclocuire baterii
- H Akkumulátorcseré
- UA Заміна акумуляторної батареї
- RUS Замена аккумуляторной батареи

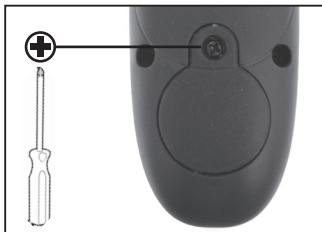





CE approved



Ring Automotive Limited,
Gelderd Road, Leeds LS12 6NA **England**

 +44 (0)113 213 2000

 +44 (0)113 213 7339

 +44 (0)113 231 0266

 autosales@ringautomotive.co.uk

 www.ringautomotive.co.uk

L442